


## Use ZTE H268A Unit as DSL Modem/Router (Bell FTTN Service)

Requirements: 1 RJ11/Phone Cable, 1 AC Power Cord

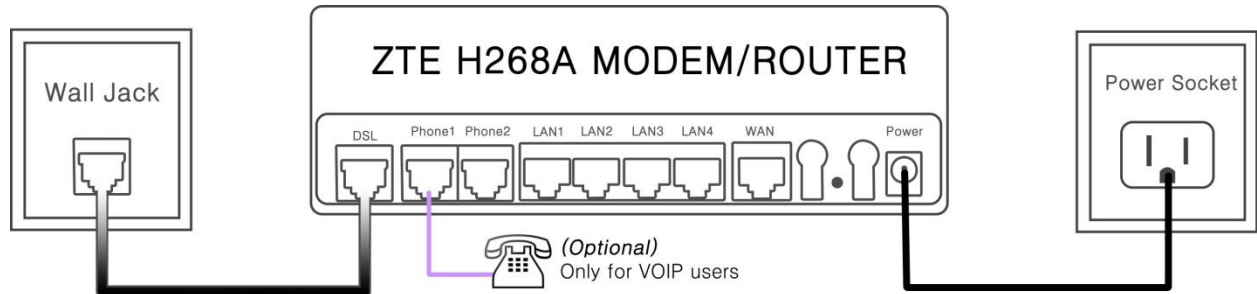

1. Connect RJ11/Phone cable from wall phone jack to DSL port on ZTEH268A unit.
2. Connect AC Power cord in Power port on ZTE H268A unit.
3. (Optional) If you signed up for VOIP service, connect Phone to Phone port on ZTE H286A unit.

After few minutes of waiting signal, **Power, Broadband, Internet and WLAN LED lights must be on or flash.**


If any light is off, please contact us at [support@gtatel.com](mailto:support@gtatel.com) for further assistance.

## Wireless information (SSID/Password) located at the back of ZTE H268A Unit



## Use ZTE H268A Unit as Router (Cable Service)

Requirements: 1 active coaxial cable, 1 Ethernet Cable, 1 AC Power Cord

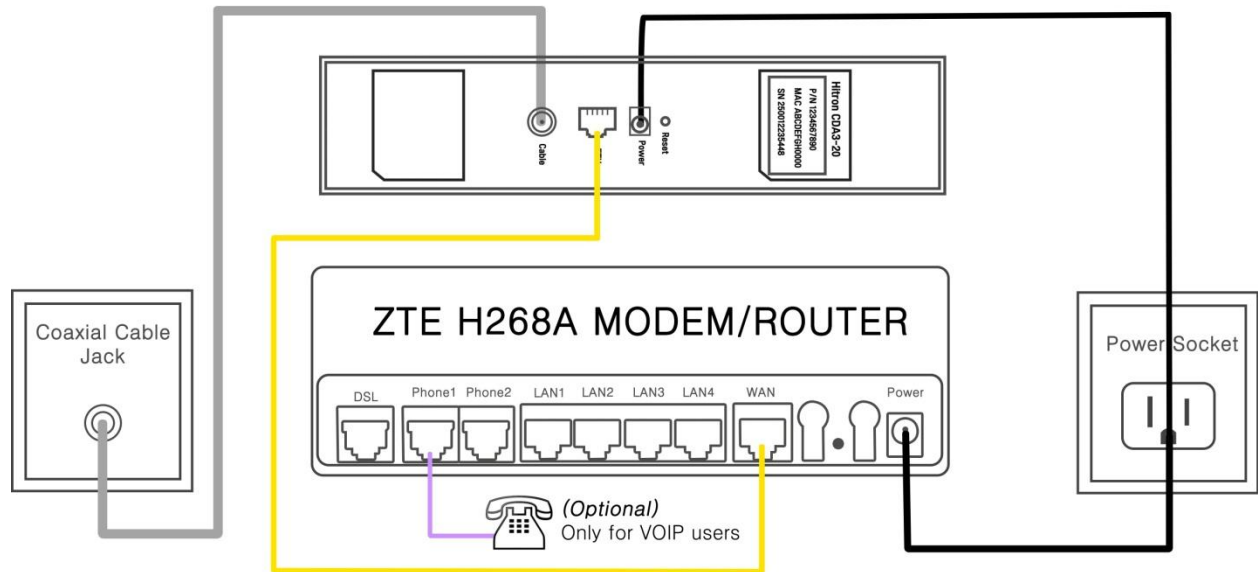

1. Connect Ethernet cable from LAN port on cable modem to WAN port on ZTE H268A unit
2. Connect AC Power cord in Power port on ZTEH268A unit.
3. (Optional) If you signed up for VOIP service, connect Phone to Phone port on ZTE H286A unit.

After few minutes of waiting signal, **Power, Broadband, Internet and WLAN LED lights must be on or flash.**

If any light is off, please contact us at [support@gtatel.com](mailto:support@gtatel.com) for further assistance.

## Wireless information (SSID/Password) located at the back of ZTE H268A Unit

